

Get a Quote

Overview

Cisco AIR-ANT2547VG-N Aironet dual-band 2.4 GHz 4 dBi and 5 GHz 7 dBi Omnidirectional N-type Connector Antenna

Quick Specification


Product Code	AIR-ANT2547VG-N
Enclosure Color	Gray
Antenna Type	Omni-directional collinear array
Operational Frequency Ranges	2400–2483 MHz 5150–5875 MHz
Nominal Input Impedance*	50 Ohms
Diameter	1.25 in. (3.18 cm)
Length	11.1 in. (28.2 cm)
Weight	6.0 oz. (170.0 g)

Product Details:

The Front Panel:



Radiation Patterns

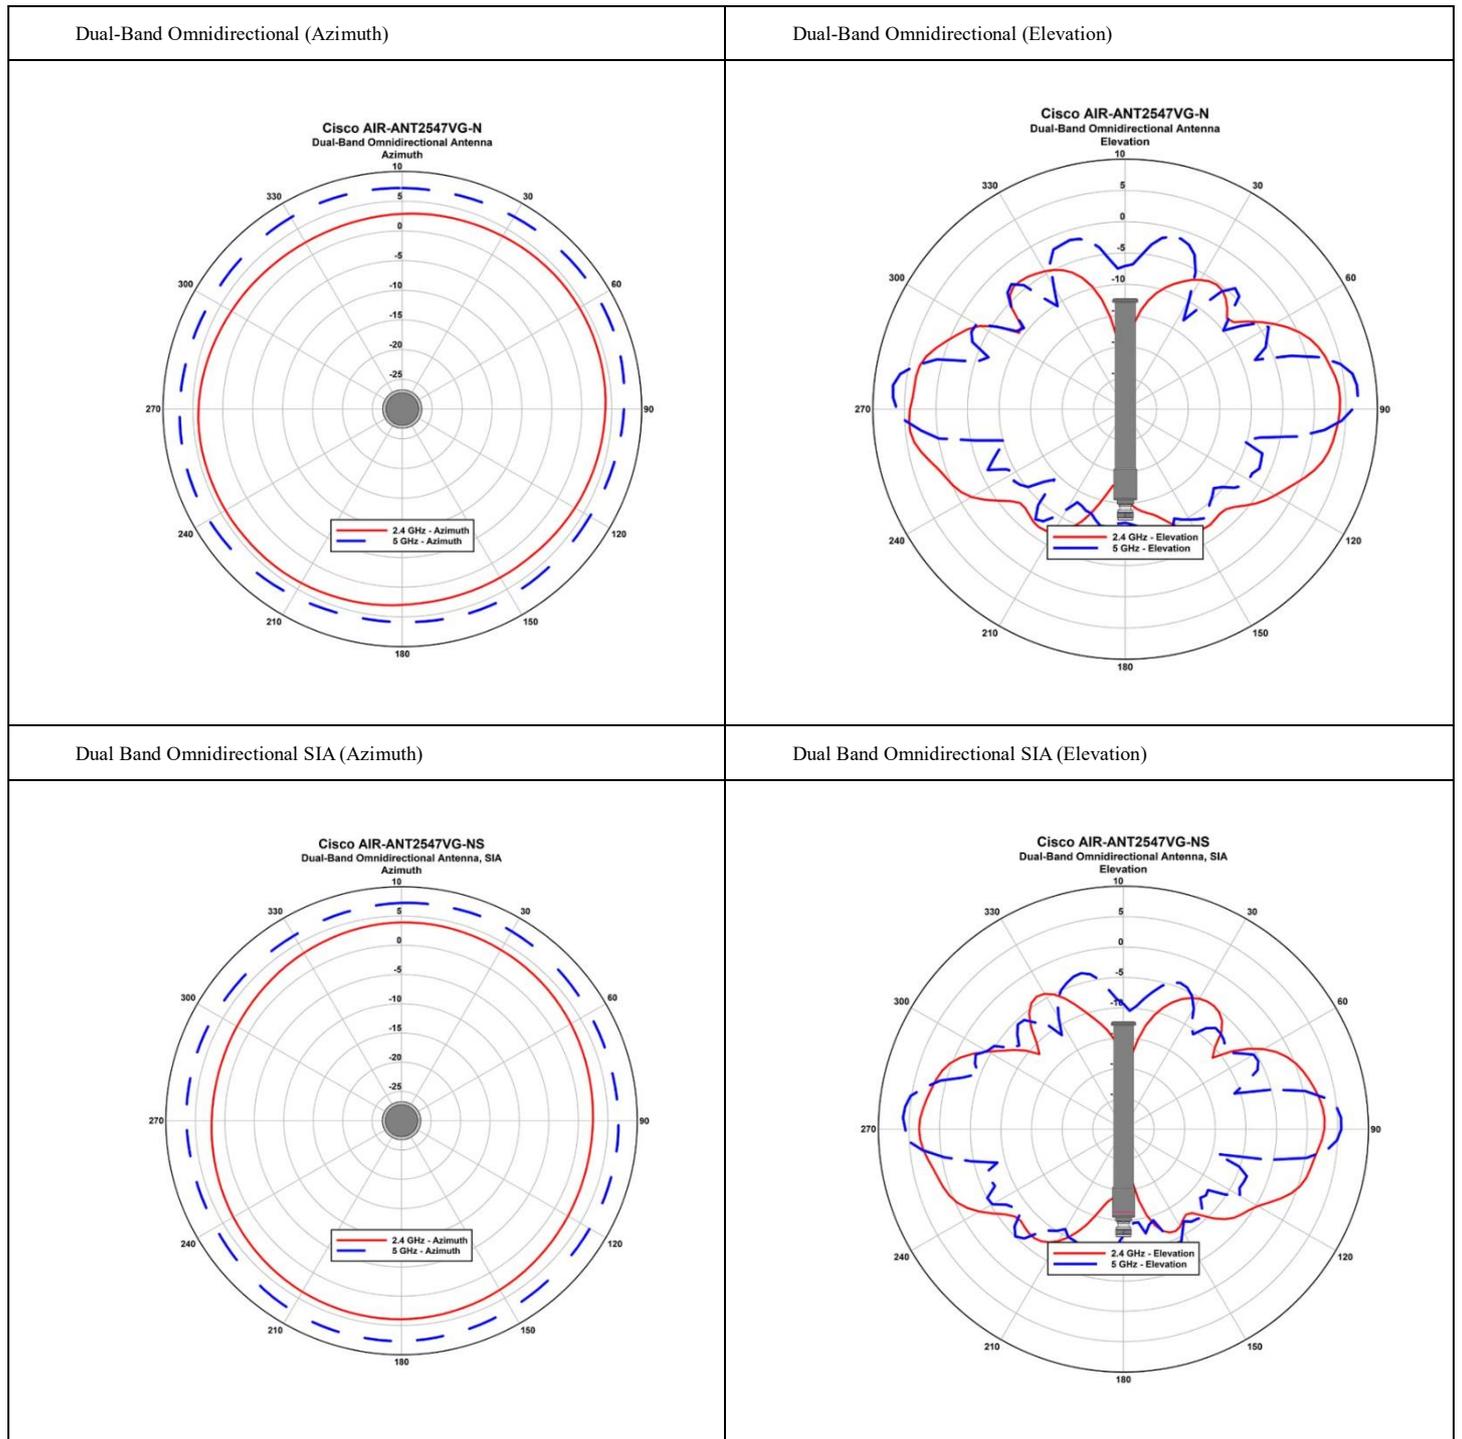

Antenna SKUs

Antenna Part Numbers	Radome Color
AIR-ANT2547V-N	White

AIR-ANT2547VG-N	Gray
AIR-ANT2547V-N-HZ	White, Hazardous Locations

System Requirements

This antenna is designed for use with the Cisco Aironet Outdoor Access Points.

Safety Precautions

Warning: Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can come into contact with such circuits. When installing the antenna, take extreme care not to come into contact with such circuits, as they may cause serious injury or death. For proper installation and grounding of the antenna, please refer to national and local codes (e.g. U.S.: NFPA 70, National Electrical Code, Article 810, Canada: Canadian Electrical Code, Section 54). Statement 280

For your safety, read and follow these safety precautions:

1. Before you install an antenna, contact your Cisco account representative to explain which mounting method to use for the size and type of antenna that you are about to install.
2. Find someone to help you—installing an antenna is often a two-person job.
3. Select your installation site with safety, as well as performance, in mind. Remember that electric power lines and phone lines look alike. For your safety, assume that any overhead line can kill you.
4. Contact your electric power company. Tell them your plans and ask them to come look at your proposed installation.
5. Plan your installation carefully and completely before you begin. Each person involved in an installation should be assigned to a specific task and should know what to do and when to do it. One person should be in charge of the operation to issue instructions and watch for signs of trouble.
6. When installing your antenna, follow these guidelines:
 - a. Do not use a metal ladder.
 - b. Do not work on a wet or windy day.
 - c. Do dress properly—wear shoes with rubber soles and heels, rubber gloves, and a long-sleeved shirt or jacket.
7. If the assembly starts to drop, move away from it and let it fall. Because the antenna, mast, cable, and metal guy wires are all excellent conductors of electrical current, even the slightest touch of any of these parts to a power line completes an electrical path through the antenna and the installer.
8. If any part of the antenna system should come in contact with a power line, do not touch it or try to remove it yourself. Call your local power company to have it removed safely.
9. If an accident should occur with the power lines, call for qualified emergency help immediately.

Installation Notes

The antenna is designed to connect to a dedicated antenna port on the access point. No special tools are required to install the antenna.

The antenna is resistant to the full range of outdoor environments. After the antenna is attached to the access point, seal the connections to prevent moisture and other weathering elements from affecting performance. Cisco recommends using a coax seal (such as CoaxSeal) for outdoor connections. Silicone sealant or electrical tape are not recommended for sealing outdoor connections.

Choosing a Mounting Location

The antenna is designed to create an omni-directional broadcast pattern. To achieve this pattern, the access point should be mounted clear of any obstructions to the sides of the radiating element. If the mounting location is on the side of a building or tower, the antenna pattern is degraded on the building or tower side.

Generally, the higher an antenna is above the ground, the better it performs. A practice is to install your antenna about 5 to 10 ft (1.5 to 3 m) above the roof line and away from all power lines and obstructions.

Tools and Equipment Required

No tools are required to mount the antenna to the access point. However, you may need a 3/4-in. (19 mm) open end or combination wrench (or adjustable wrench) to remove the antenna port covers.

For information about tools required to mount the access point, see the appropriate access point documentation.

Mounting the Antenna

To connect the antenna to the access point:

1. If necessary, remove the antenna port cover.
2. Align the antenna's N-type connector with the appropriate antenna port..
3. Gently push the antenna into the port..
4. Hand tighten the antenna to the port using the metal knurled ring only.

Warning: Do not use the plastic body to tighten. This may damage the antenna.

Get more information:

Do you have any question about the AIR-ANT2547VG-N?

Contact us now via e-mail: info@hi-network.com

Specific Data Sheet:

Antenna type	Omni-directional colinear array
Operating frequency range	2400–2483 MHz; 5150–5875 MHz
2:1 VSWR bandwidth	2400–2483 MHz; 5150–5875 MHz
Nominal input impedance	50 Ohms
Gain (2400–2483 MHz)	4-dBi
Gain (5250–5875 MHz)	7-dBi
Polarization	Linear
E-plane 3-dB beamwidth	2.4 GHz: 30° for 5 GHz 14°
H-plane 3-dB bandwidth	Omni-directional

Length	11.1 in. (28.2 cm)
Diameter	1.25 in. (3.17 cm)
Weight	6.0 oz. (170.0 g)
Connector type	N-Male
Mounting	To mast mount the antenna you must purchase the U-bolt bracket from a third party
Operating temperature	-40–185°F (-40–85°C)
Water/Foreign Body Ingress	IP66, IP67
Wind rating	100 mph (161 kph) operational 165 mph (265 kph) survival

Want to Buy

Get a Quote



[Learn More](#) about Hi-Network



[Search](#) our Resource Library



[Follow](#) us on LinkedIn



Contact for [Sales or Support](#)

Contact HI-NETWORK.COM For Global Fast Shipping

HongKong Office Tel: +00852-66181601

HangZhou Office Tel: +0086-571-86729517

Email: info@hi-network.com

Skype: [echo.hinetwork](https://www.skype.com/people/echo.hinetwork)

WhatsApp Business: +8618057156223

